

MSS-MS3-WF magnetic sensor

User manual



Content

1. Product overview	3
2. First use	4
3. App control	5
4. Settings	10
5. Maintenance and safety notes	15
Contacts:	16

1. Product overview



Fig.1. MSS-MS3-WF magnetic sensor

The MSS-MS3-WF Magnetic Sensor is a wireless door and window contact designed to detect opening and closing events in real time. Consisting of two compact parts — the sensor unit and a magnet — it triggers an alert whenever the magnetic contact is broken, making it ideal for monitoring entry points such as doors, windows, cabinets, and gates.

Featuring Wi-Fi connectivity, the sensor transmits status updates directly to the connected app without requiring an additional hub, allowing for quick and flexible installation. Its low power consumption ensures long battery life, while the compact, discreet design allows for unobtrusive placement on most door and window frames.

The MSS-MS3-WF can be used as a standalone security accessory or integrated into a broader smart home and alarm system, providing reliable protection against unauthorised access.

2. First use

1. Push the mounting bracket upward and take out the bracket, then insert the battery. Put the battery into the battery bin and place it according to the graphics in the battery bin. After two batteries are loaded, the indicator lights are always on and then off.

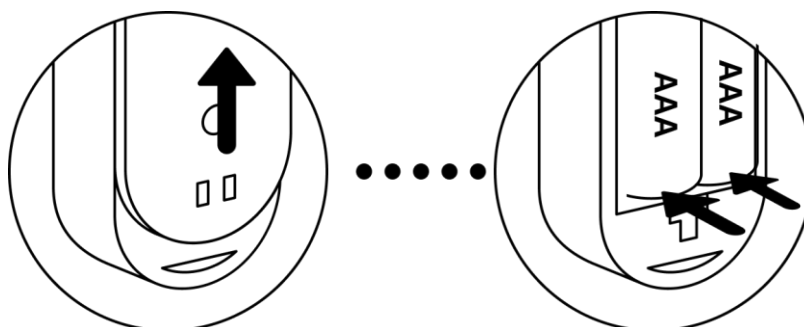


Fig.2. Removing the mounting bracket and inserting the batteries

2. If the LED indicator does not blink - take the clip from the kit and hold the button on the bottom of the device for 10 seconds to reset.

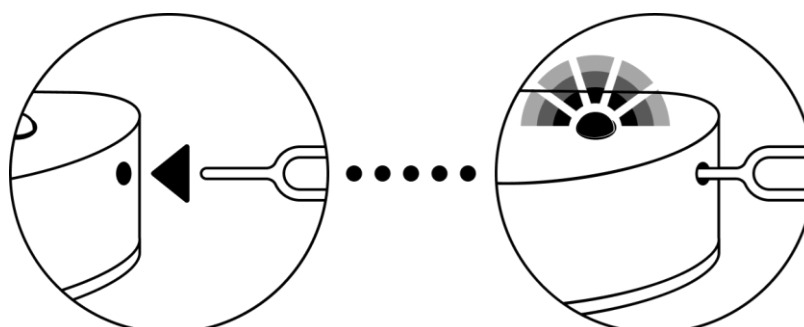


Fig.3. Resetting the sensor with the pin

3. App control

1. Download or open the Partizan mobile app (available on Google Play, App Store, Huawei AppGallery).

The Partizan mobile app can be downloaded via the link below.

<https://my.partizancloud.com/mobile>

2. Scan the QR code on the device box to open the device page in the Partizan app.

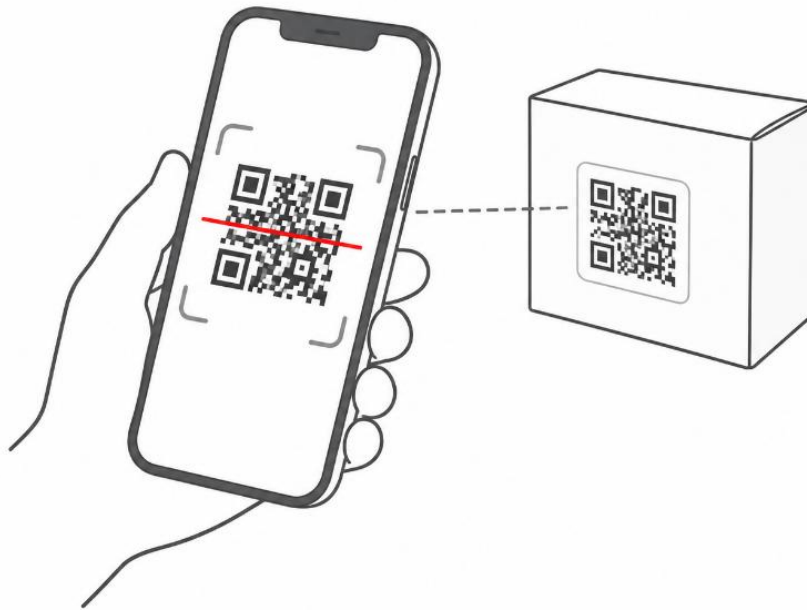


Fig.4. QR code scanning

3. Open the DIY Wizard and tap Next to start adding the sensor as a new device.

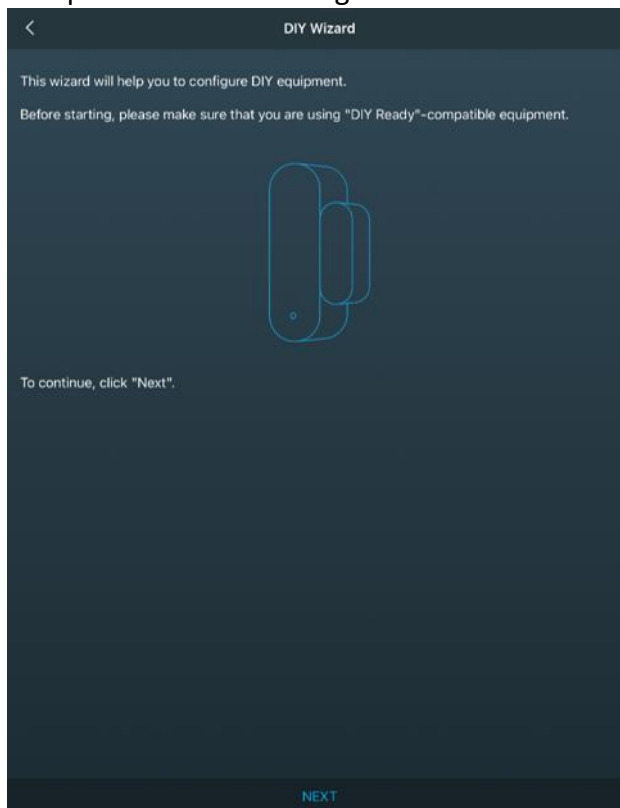


Fig.5. DIY Wizard – start screen

4. Select the 2.4GHz Wi-Fi network the sensor will use and enter the network password, then tap Next. Wireless sensors do not support the 5GHz standard.

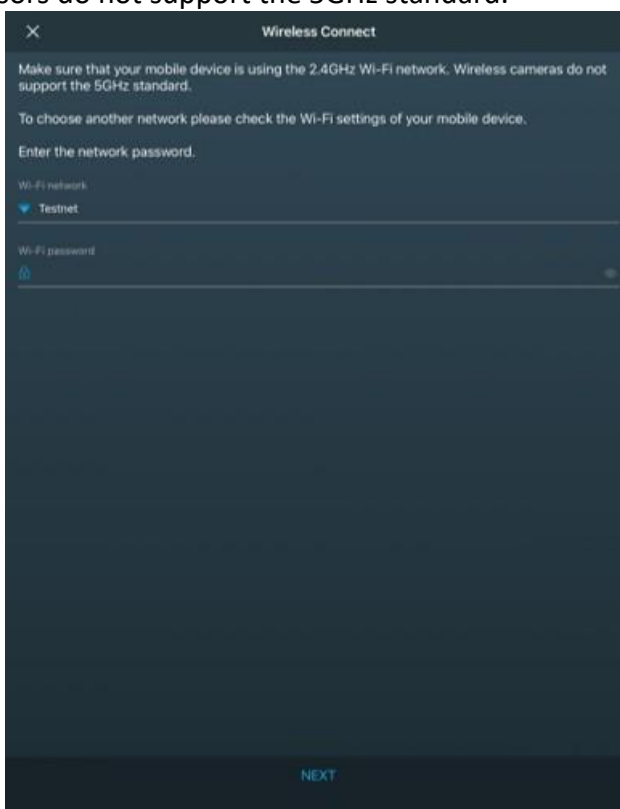


Fig.6. Wireless Connect – Wi-Fi network and password

5. Select the cloud account (location) the sensor will be added to.

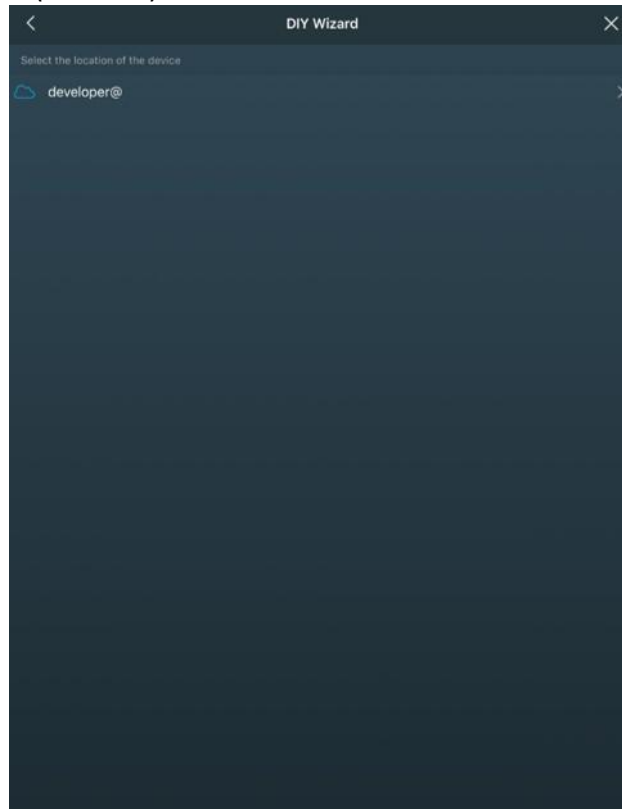


Fig.7. DIY Wizard – select device location

6. Wait while the app connects to the sensor and configures it on the selected Wi-Fi network.



Fig.8. Configuring the new device

7. Once configuration is complete, tap Done to finish adding the sensor.

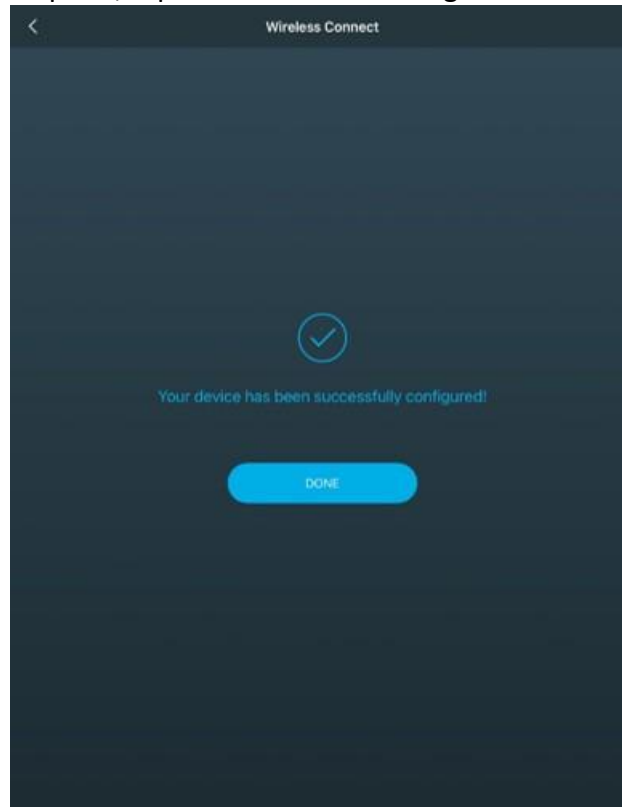


Fig.9. Wireless Connect – configuration complete

8. The sensor is now added to the app. When the magnetic contact is open (door or window ajar), the status screen shows a red icon labelled Contacts unlocked.

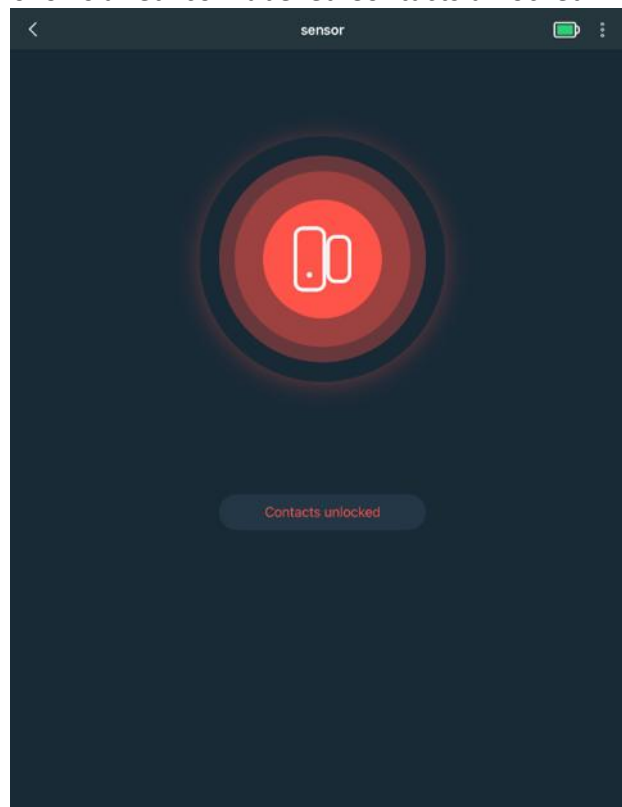


Fig.10. Sensor status screen – contacts unlocked

9. When the magnetic contact is closed (door or window shut), the status screen shows a green icon labelled Contacts locked.

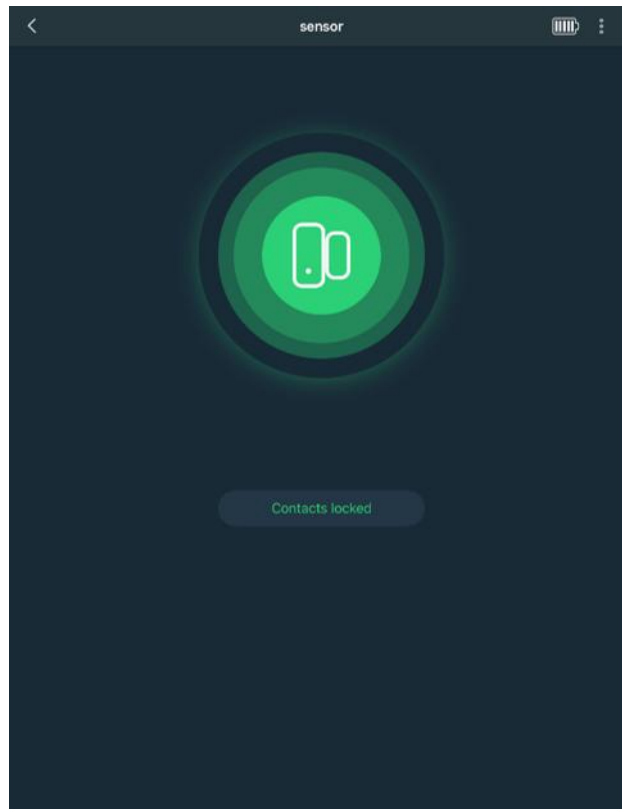


Fig.11. Sensor status screen – contacts locked

4. Settings

1. On the sensor's status screen, tap the three-dot menu icon (⋮) in the top right corner, as shown, to open the Support and Device settings options.

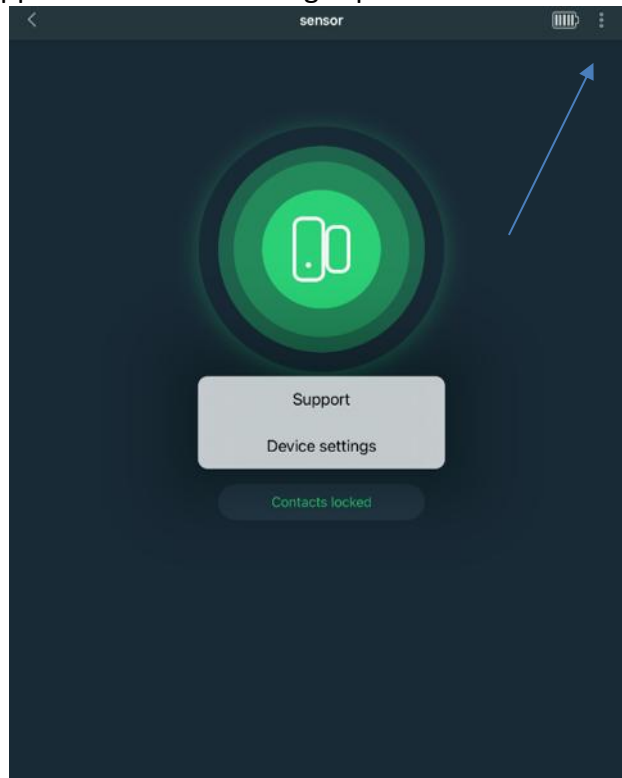


Fig.12. Sensor screen – Support and Device settings menu

2. The Device settings menu gives access to Connection settings, Notification schedule, Shared access, Firmware upgrade, and Delete device.



Fig.13. Device settings menu

3. In Connection settings, check or edit the device name, folder, and connection string, then tap Apply to save the changes.

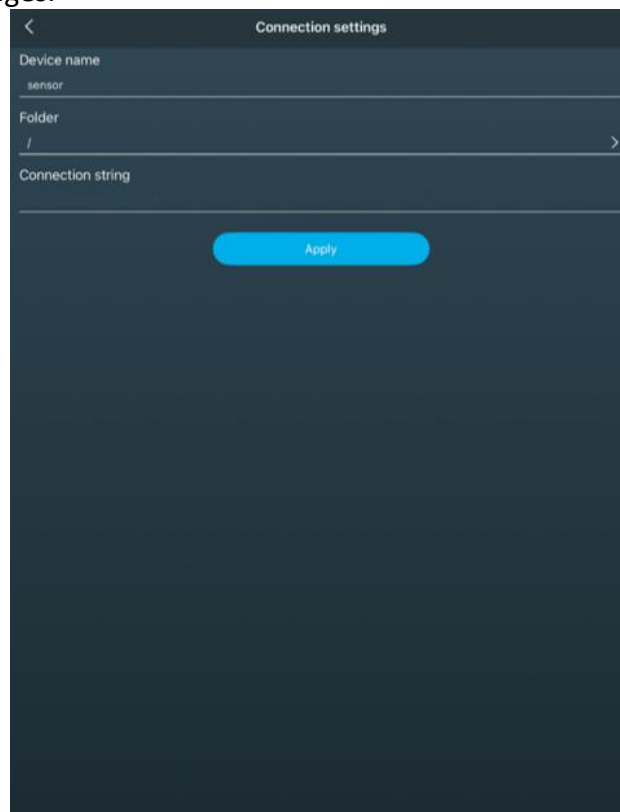


Fig.14. Connection settings

4. In Shared access, enter the email address of another cloud user and tap Save to give them access to the device.

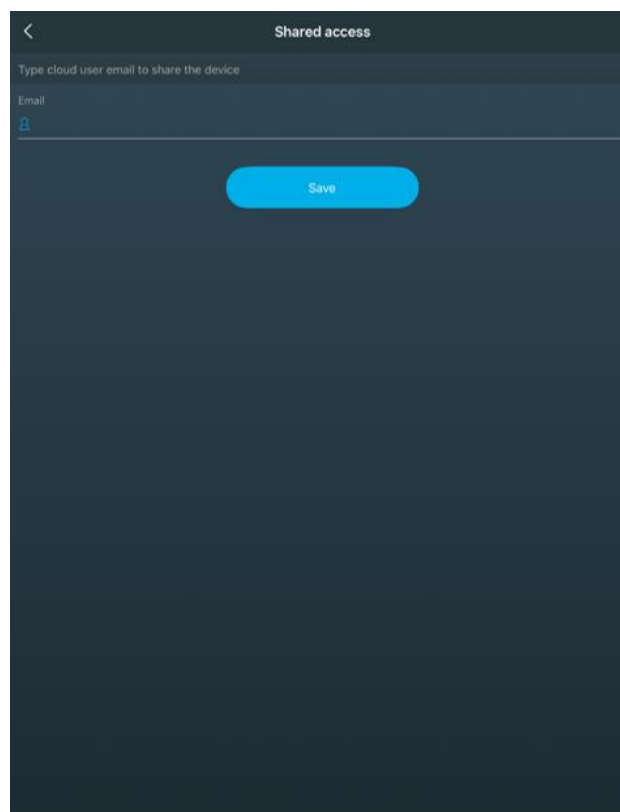


Fig.15. Shared access

5. In Notification schedule, select the days of the week and set the active time range on the 24-hour dial. Use Copy schedule to apply the same time range to other days.

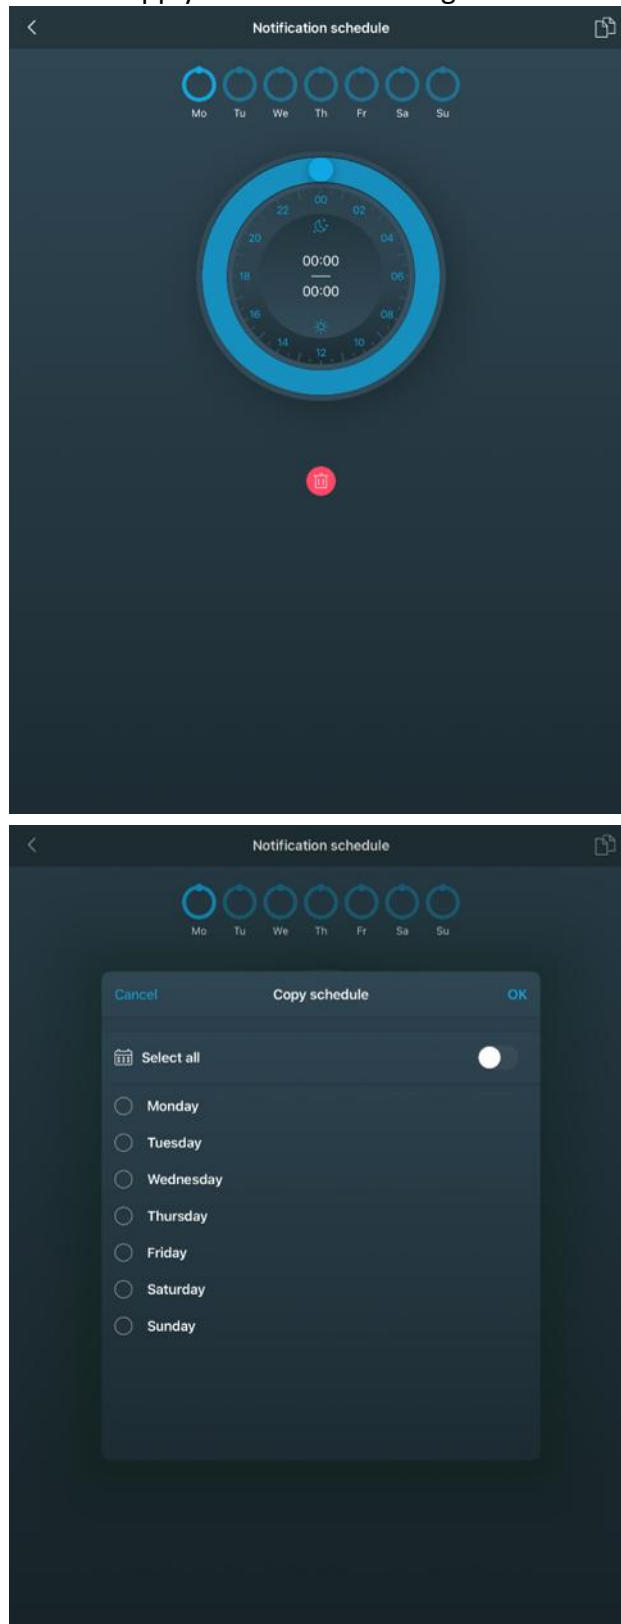


Fig.16. Notification schedule and copy-schedule dialog

All Myers devices send a real-time push notification to your phone whenever something happens, so you're always informed even when you're away from home.

6. In Firmware upgrade, check the current cloud firmware version and tap Firmware upgrade to install the latest version.

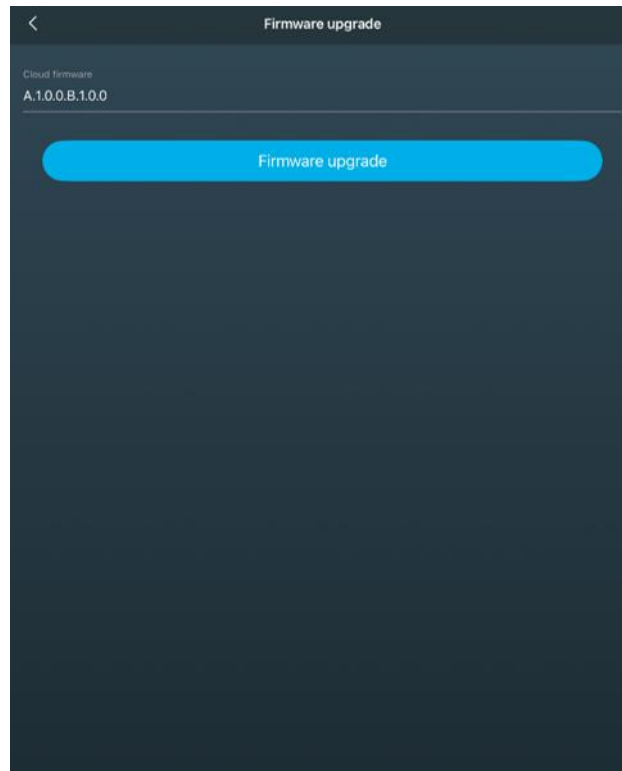


Fig.17. Firmware upgrade

7. In Support, review the technical support working hours. Enable Provide the device information so that support can see the device model, firmware version, and basic diagnostics if needed.

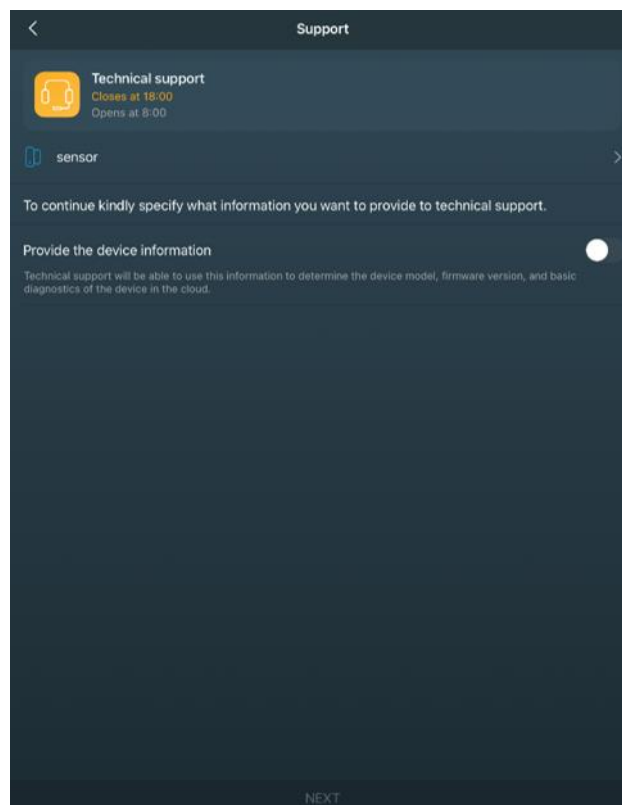


Fig.18. Support

8. In Delete device, tap Delete device to remove the sensor from the app. This permanently deletes all data associated with the device.

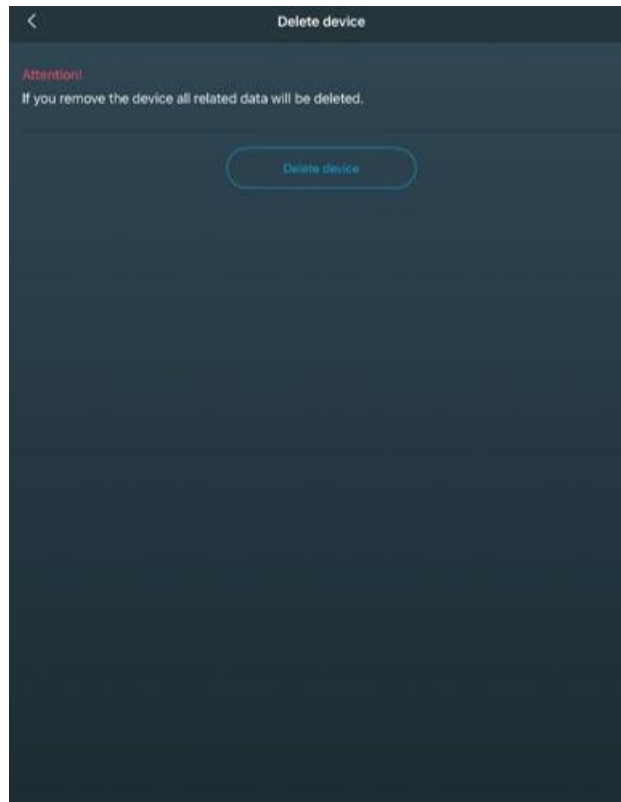


Fig.19. Delete device

5. Maintenance and safety notes

Power supply: Use only batteries of the type specified for this device, and replace both batteries at the same time. Insert them with the correct polarity as shown inside the battery compartment. Do not mix old and new batteries or batteries of different types.

Battery safety: Do not disassemble, puncture, crush, short-circuit, or expose batteries to fire, heat, or direct sunlight. Remove the batteries if the sensor will not be used for an extended period. Dispose of used batteries in accordance with local regulations; do not dispose of them with general household waste.

Installation: Mount the sensor unit and the magnet on clean, flat, stable surfaces so that the gap between them stays within the manufacturer's specified detection range when the door or window is closed. Avoid installing the sensor near metal surfaces, other magnets, or sources of strong electromagnetic interference, as this may cause false or missed alerts.

Operating environment: The device is designed for indoor use only. Do not expose it to rain, condensation, high humidity, dust, or temperatures outside the range stated in the product datasheet. Keep the sensor away from direct sunlight and heat sources.

Cleaning: Wipe the device with a soft, dry cloth only. Do not use solvents, abrasive cleaners, or aerosol sprays, and never immerse the device in water.

Wireless connection: Keep the sensor within reliable range of the 2.4GHz Wi-Fi network used during setup, and away from thick walls or major sources of interference, to ensure alerts are delivered without delay. Replace the battery promptly when the app reports a low-battery warning.

Servicing: The device contains no user-serviceable parts. Do not attempt to open or repair the sensor yourself, as this may damage it and will void the warranty. If the device is faulty, contact Partizan support using the details below.

Limitations: This sensor is a supplementary security accessory and is not a certified life-safety alarm system. It should not be relied upon as the sole means of protection in situations where failure to detect an event could result in injury, loss of life, or serious property damage.

Contacts:

WhatsApp: +420 777 054 888

Email: support@partizan.global

Telegram: https://t.me/PartizanSupport_bot